


Engine Noisemaker , (K8L)

From July 2017



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



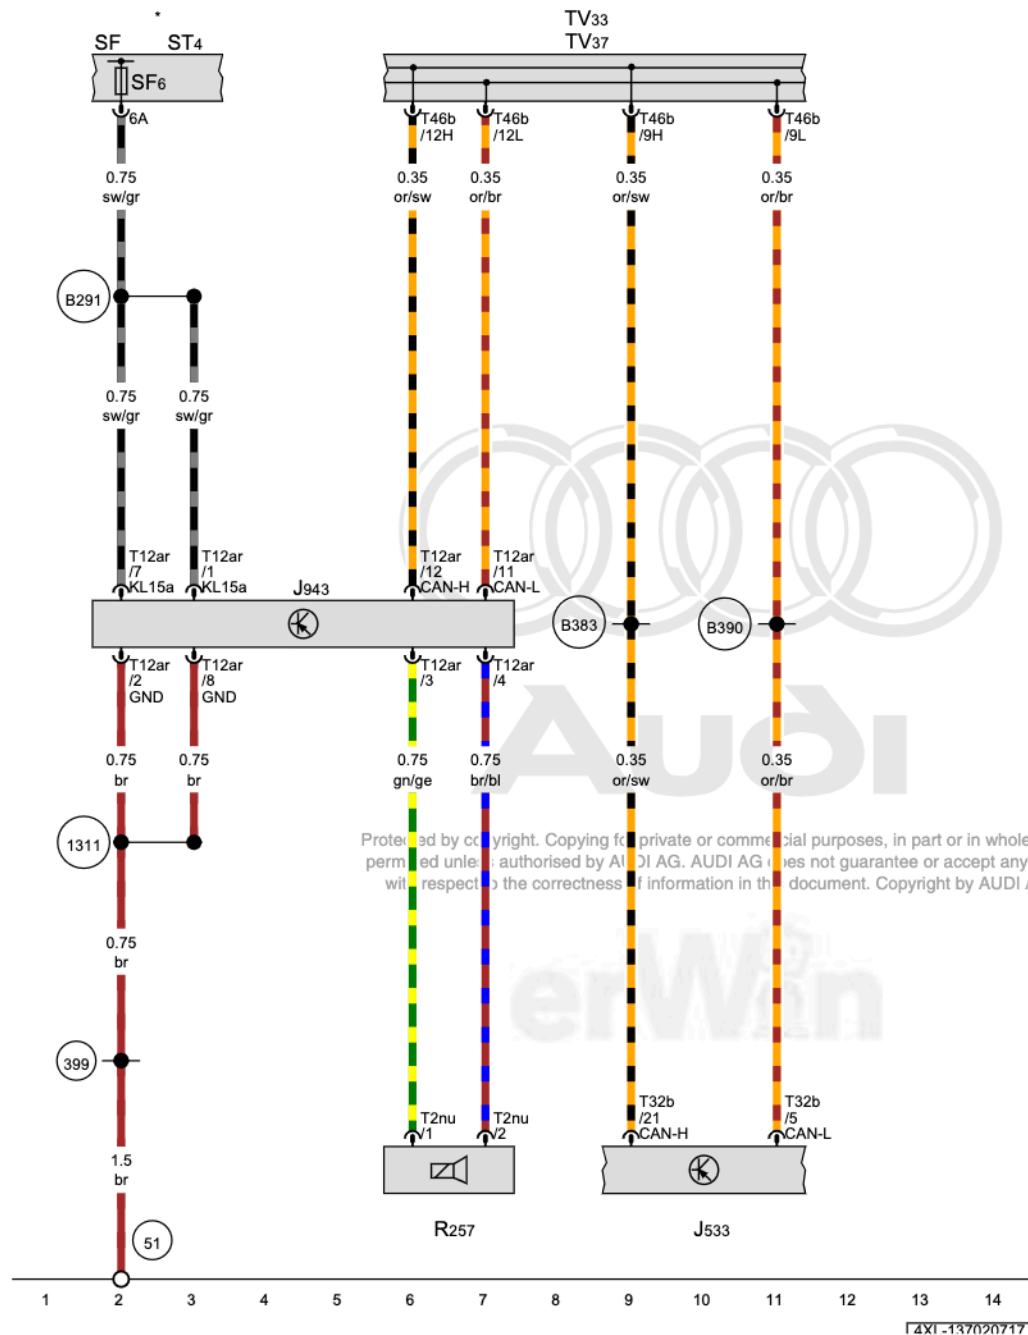

Data Bus on Board Diagnostic Interface, Engine Sound Generator Control Module, Engine Sound Generator Actuator 1, Powertrain CAN Bus Low Wire Junction

- J533 Data Bus on Board Diagnostic Interface
- J943 Engine Sound Generator Control Module
- R257 Engine Sound Generator Actuator 1
- SF Fuse Panel F
- ST4 Fuse Panel 4
- SF6 Fuse 6 (On Fuse Panel F)
- T2nu 2-Pin Connector, Black
- T12ar 12-Pin Connector, Black
- T32b 32-Pin Connector, Black, Naturally Cloudy
- T46b 46-Pin Connector
- TV33 Powertrain CAN Bus High Wire Junction, On the Relay and Fuse Panel in the Luggage Compartment, Right
- TV37 Powertrain CAN Bus Low Wire Junction

- 51 Ground Connection in Luggage Compartment, Right
- 399 Ground Connection 34 (in Main Wiring Harness)
- 1311 Ground Connection 37 (in Main Wiring Harness)
- B291 Positive Connection 15 (15a) (in Main Wiring Harness)
- B383 Powertrain CAN Bus High Connection 1 (in Main Wiring Harness)
- B390 Powertrain CAN Bus Low Connection 1 (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink